



AACHARGING





**EV Charger OCPP
Configuration Tools App
User Manual**

Please scan the QR code to download and install the latest version of the EV Charger OCPP Configuration App.



Universal Download

Chinese Download

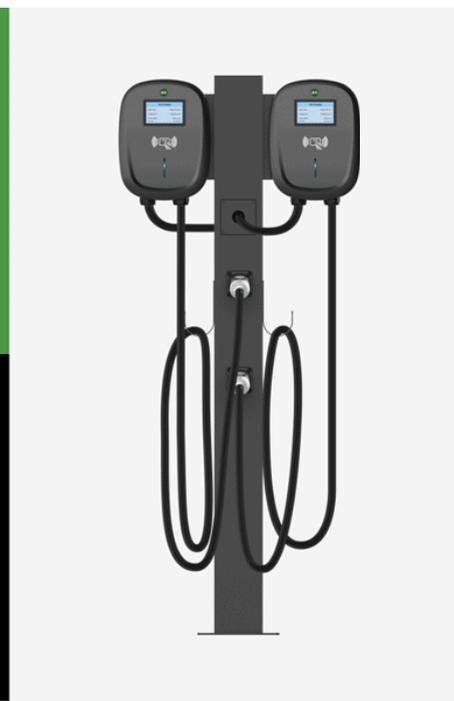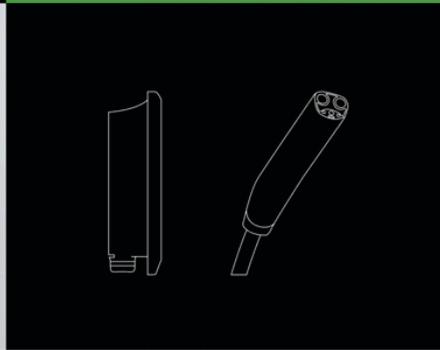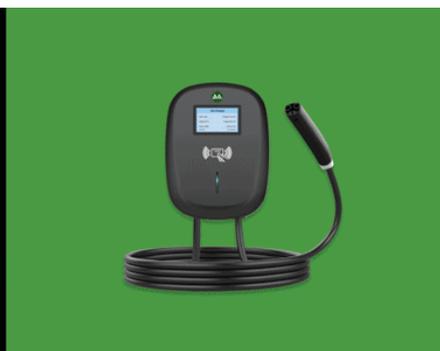
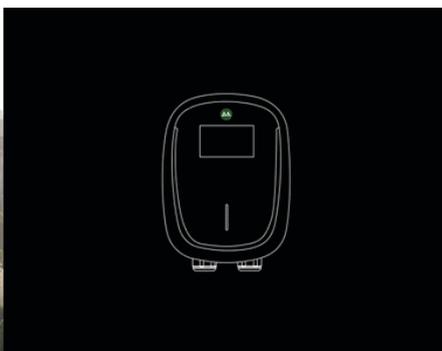


Connection Instructions

Connect to the EV Charger by using bluetooth protocol through the App.


1.Start the EV Charger
(Wait about 1 minute)

2.Open the App

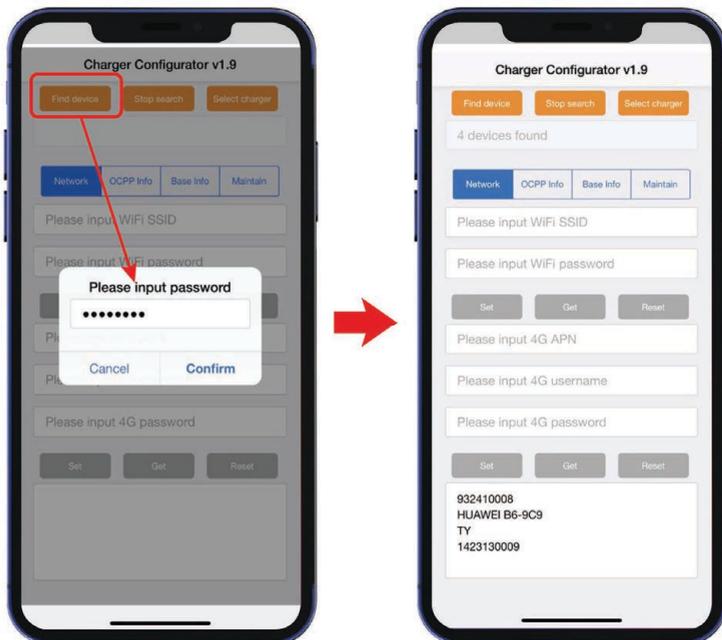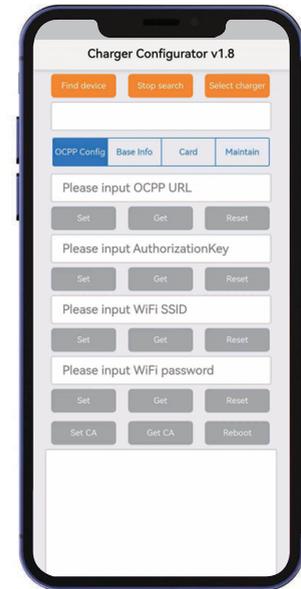

3. Search for bluetooth device (default password: Admin888)

4. Select EV Charger and connect the EV Charger.

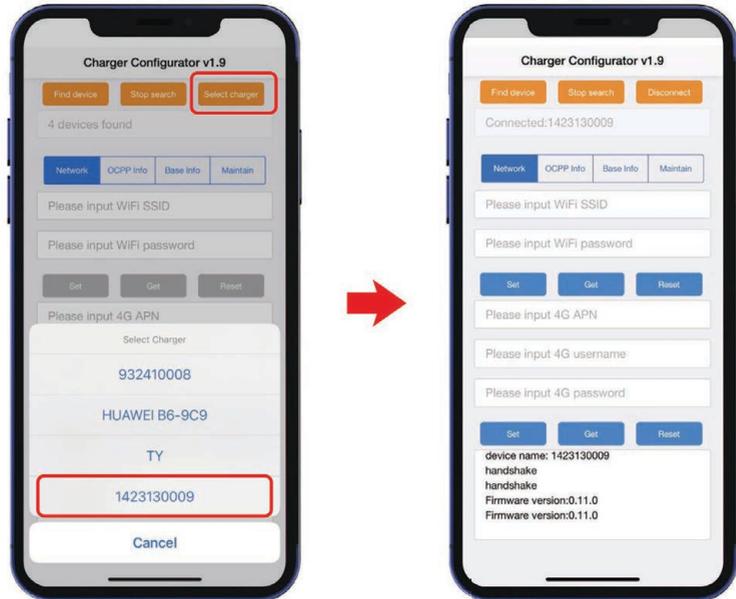

Network Instructions

Set Wi-Fi and 4G (Optional)

1. Set Wi-Fi connection.
Enter Wi-Fi SSID password and click “Set”.
2. Set 4G connection (Optional).
Enter 4G APN, 4G username, 4G password.
(This information is provided by the STM card operator. If you do not have it, leave it blank.)

OCPP Configuration



Configure the OCPP server in the "OCPP Info" tab.

1. Enter OCPP URL (EX. the Central System's OCPP URL is "wss://ocpp.io". The EV charger's unique identifier (SN) is "1423130009", so the path to request becomes "ocpp.io /1423130009"), click "Set".

2. Enter AuthorizationKey (The password is a 20-byte key), click "Set" (The authorization key is provided by the Central System. If not, leave it blank.).

3. Set CA(Optional).The set is provided by the Central System. If not, leave it blank.

4. Click "Reboot" to restart the EV Charger to take effect on the updated configuration information.

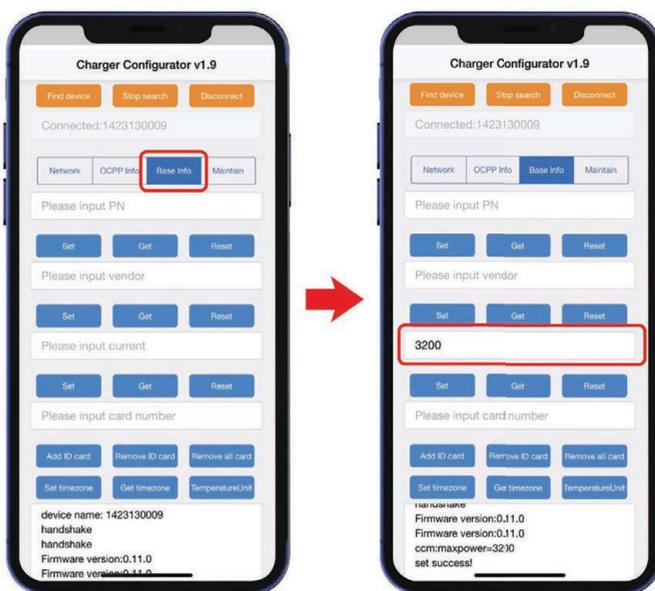
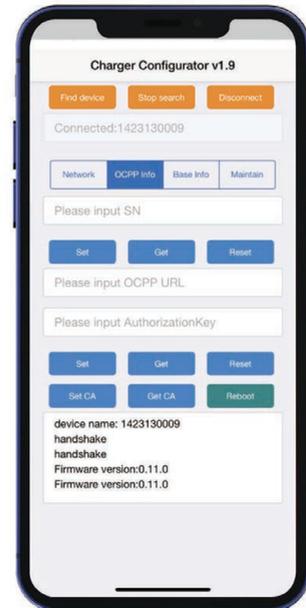


Other Function Instruction

If you want to set the input current(Limit the maximum current of the charger), as follows:

Enter input current EX. 32A, enter 3200, click "Set". EX. 40A,enter 4000, click "Set".

If you need to update OTA:
 Unplug the charging gun before OTA, enter OTA URL,
 click "Start OTA",
 EX. Received below information from OCPP protocol,
 1.FTP Address: ftp.google.com
 2.FTP Username: ftpuser
 3.FTP Password: ftppassword
 4.OTA Filename: C9.ota
 So OTA URL is
 ftp://ftpuser: ftppassword@ftp.google.com/C9.ota

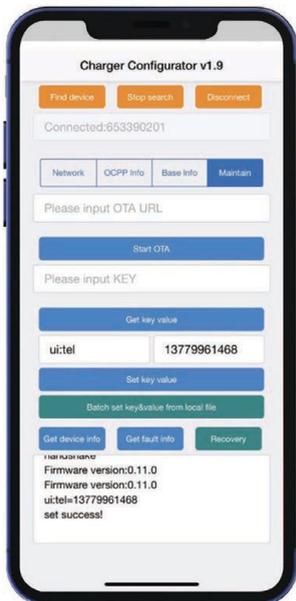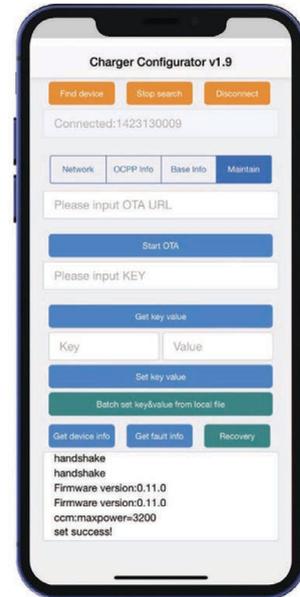



Set Screen Parameters

Set the telephone number on the screen

Enter key "ui:tel", value "tel number".
 You will see the telephone number display on
 the screen when you plug the gun.
 Example as follow.

Display the QR code on the charger screen

Enter key "qrcode0",value ".google..."
 You will see the QR code display on the screen when you plug the gun.
 If it is a dual port charger, enter key "qrcode1", value ".google...".
 "qrcode1" stands for the QR code of the second gun.
 Example as follow.

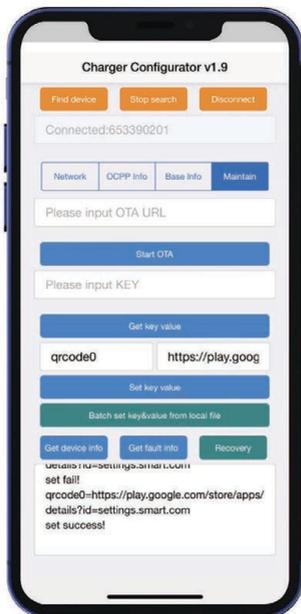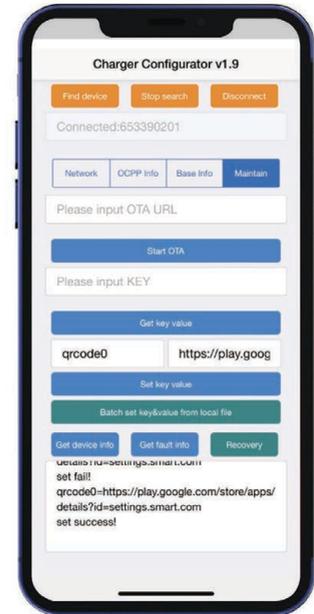

Or you can use the ChangeConfiguration command in the OCPP protocol to change the tel number and QR code. As follow.

```

{"key": "ui:tel", "value": "tel number"},
{"key": "qrcode0", "value": "http://play.google.com"}
    
```